



- ① PSU SATA connector  
連接SATA電源
- ② Connect it with the fan I/O port connector  
連接I/O上風扇控制鍵接口
- ③ Fan connectors  
機殼風扇接口

## • Instructions for inbuilt controller 內建控制板說明：

1. Make sure ①、② are well connected.  
先確認 ①、② 端子位置皆連接正確
2. Connect the fan signal connectors with ③  
將風扇訊號線安裝至 ③
3. Connect SATA connector with ①  
連接 ① SATA電源
4. Press the Power button on the case.  
開啟機箱Power按鍵
5. Press the fan control button on the I/O, there are two airflow speed switching modes.  
操作I/O上風扇控制按鍵，共2種風速模式

**ANTEC**

© 1986 - 2020 ANTEC, INC. ALL RIGHTS RESERVED.